


# Leica GNSS RTK Setup

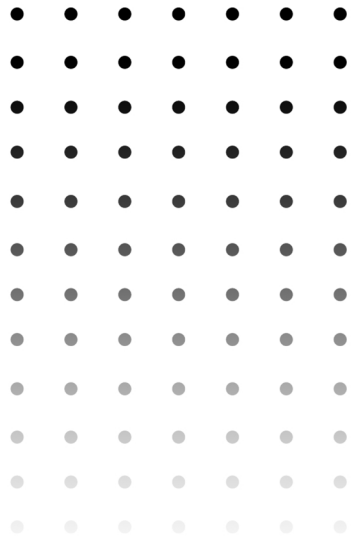


## CONFIGURE RTK CORRECTIONS FOR LEICA GNSS

Follow the steps below to setup RTK corrections for your Leica GNSS using the Zeno Connect mobile app.

If you experience any difficulty in getting started, please refer to <https://support.vgis.io>, or contact your vGIS representative.





# Leica GNSS RTK Setup

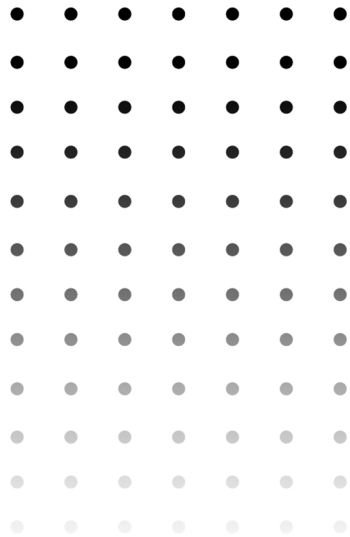


**1 STEP ONE**  
Install and launch Zeno Connect



**2 STEP TWO**  
Open "Settings"

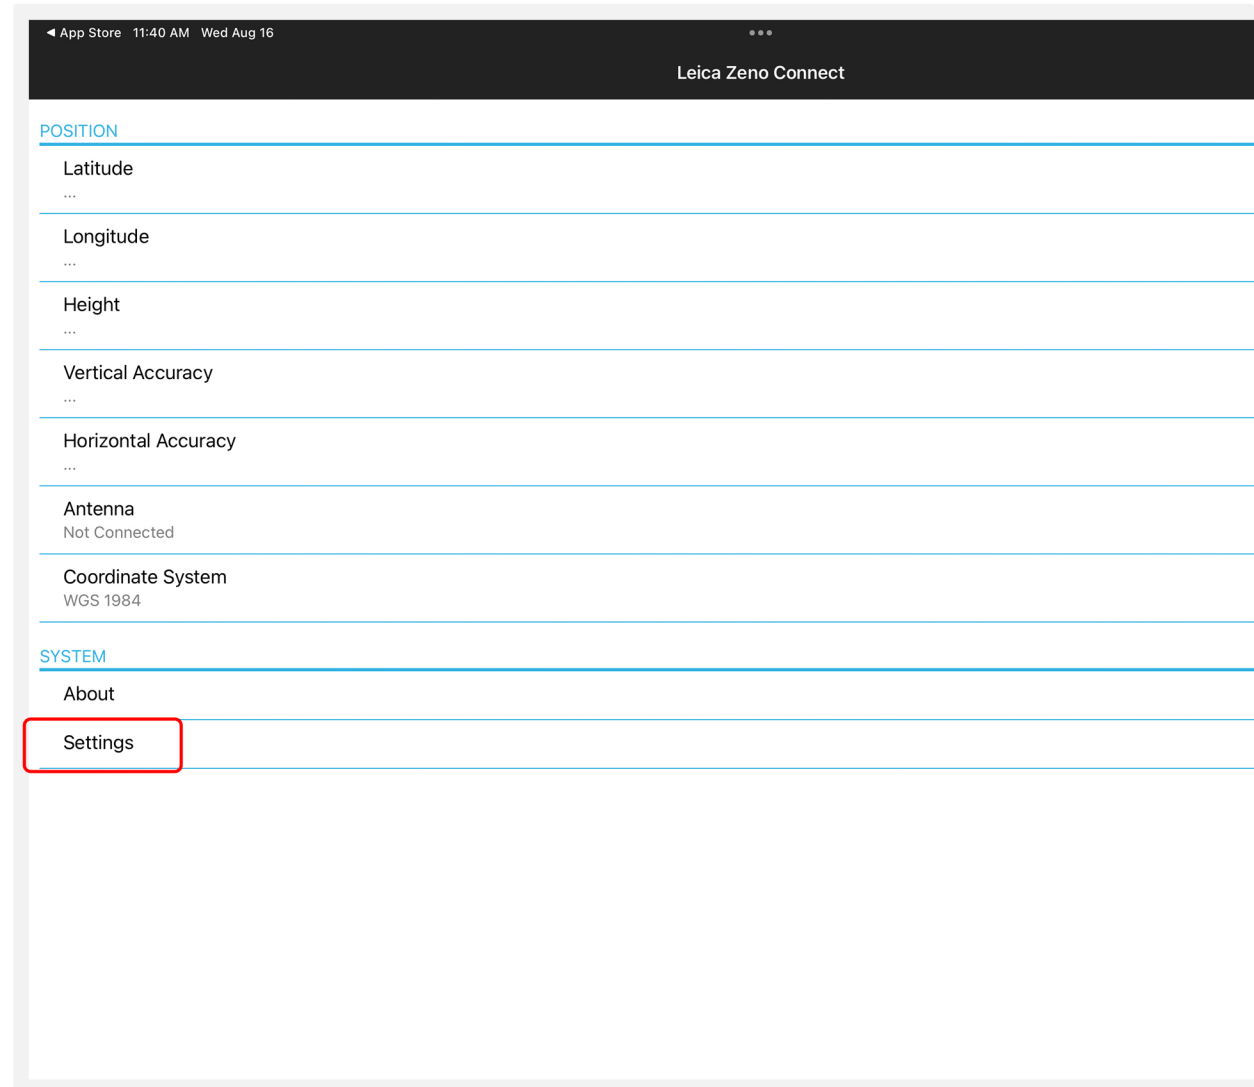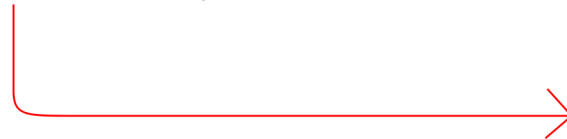


# Leica GNSS RTK Setup

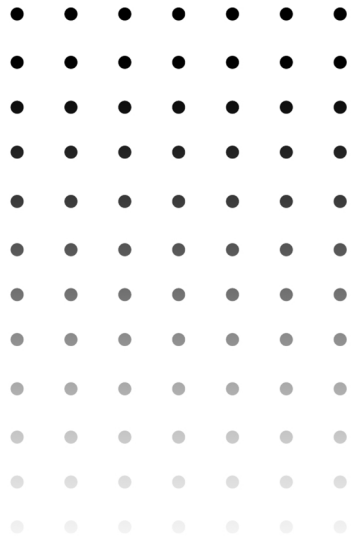


## 3 STEP THREE

Choose 'Realtime Corrections'

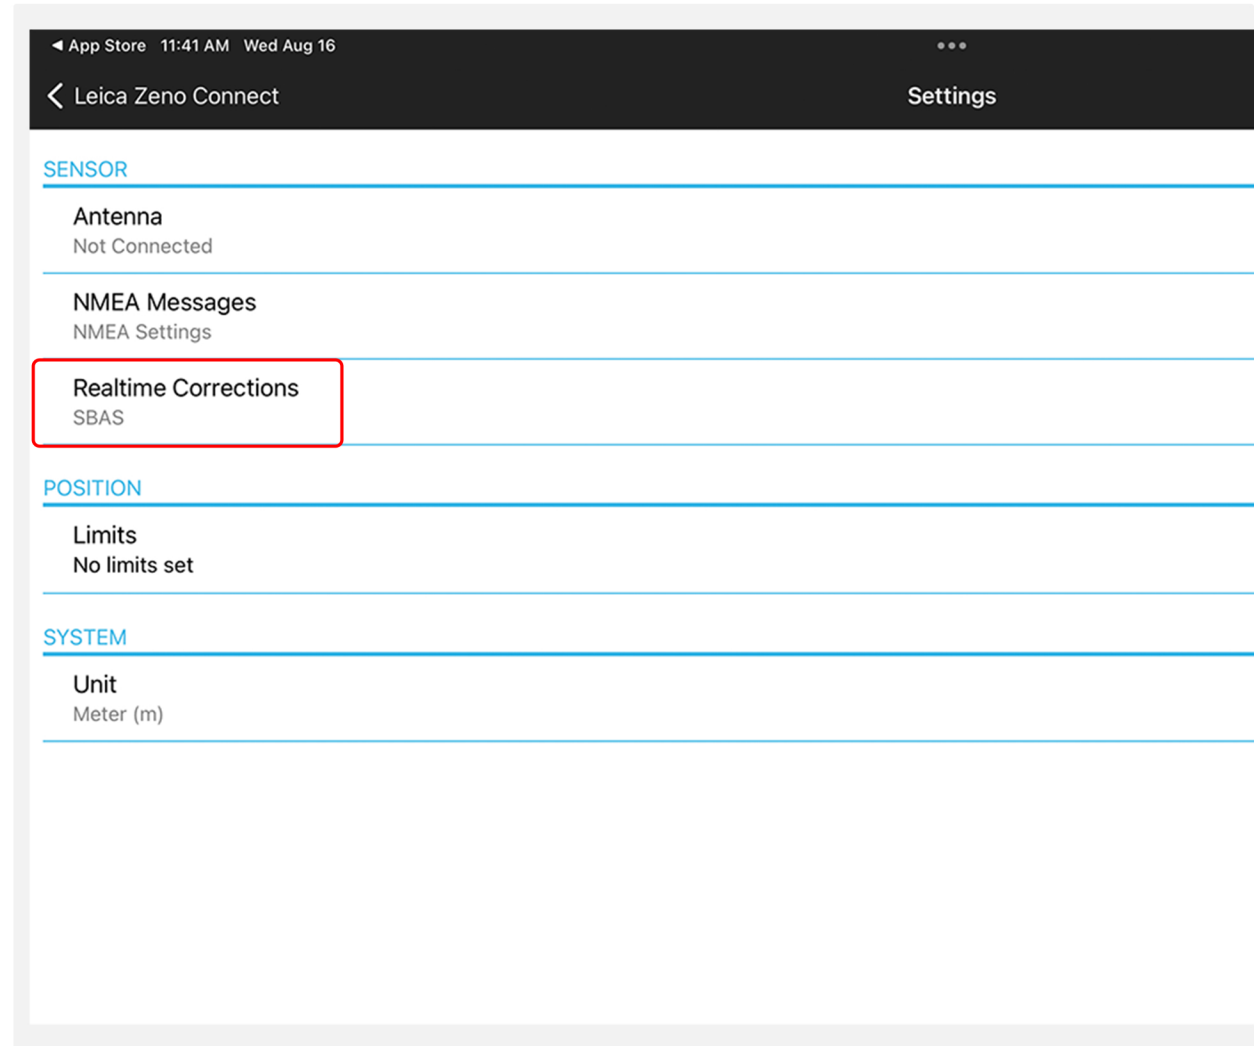

# Leica GNSS RTK Setup

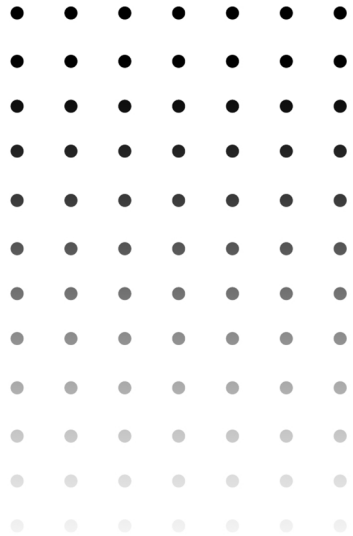


## 4 STEP FOUR

Click 'Add'


## 5 STEP FIVE

Enter profile name such as "SmartNet" into the name field

*Optional -  
Add Profile Description*

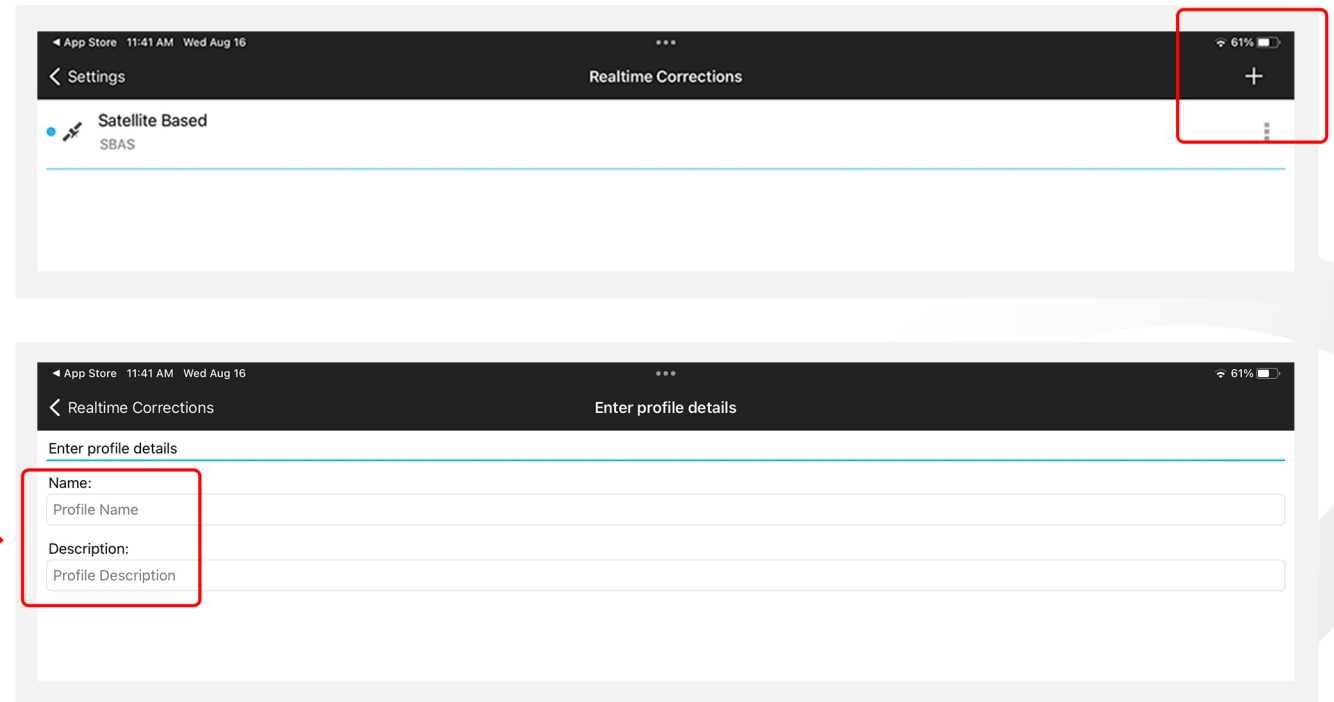


# Leica GNSS RTK Setup

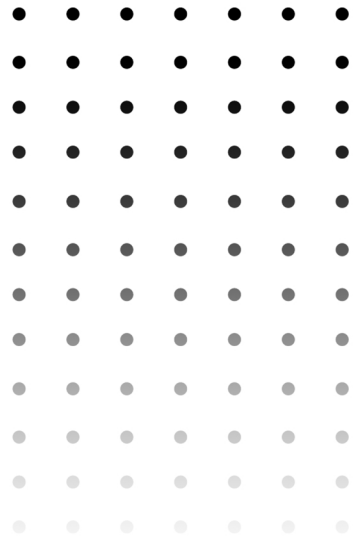


**6 STEP SIX**  
Choose Internet, then  
click next

**7 STEP SEVEN**  
Click the 'Add' Button

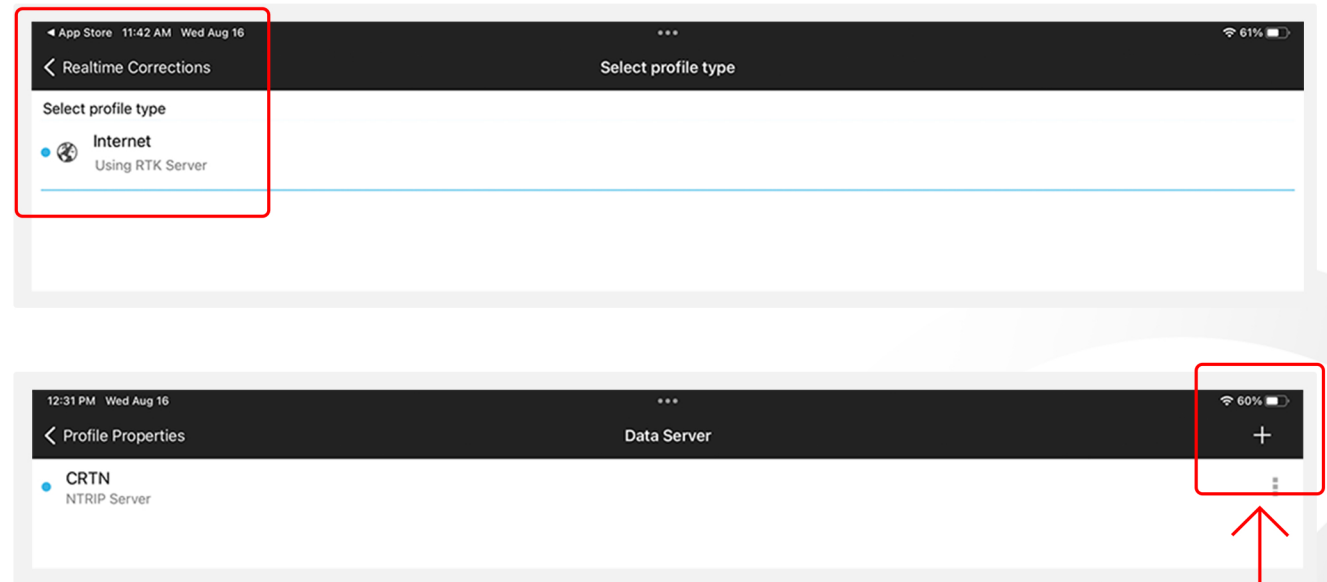

# Leica GNSS RTK Setup

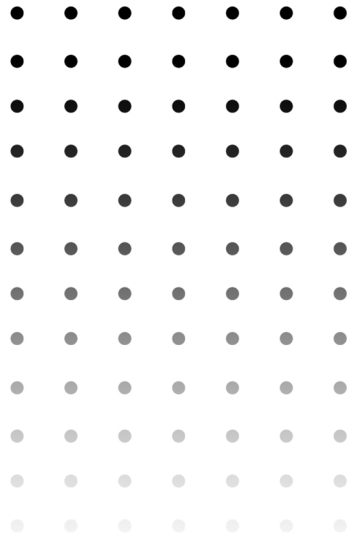

## 8 STEP EIGHT

Complete the form with as follows:

Select name for your server, e.g., "SmartNet"


Enter IP address or URL of the RKT server

Enter Port of the RTK server




Enter User ID and Password provided by the RTK provider

A screenshot of a mobile application interface showing a 'Create Data Server' form. The form is titled 'Create Data Server' and is part of a 'Realtime Corrections' section. The form contains several input fields: 'Name:', 'Address:', 'Port:', 'User ID:', and 'Password:'. The 'Port' field is currently set to '0'. At the bottom of the form, there is a toggle switch labeled 'Use NTRIP with server', which is currently turned on (green). A red box highlights the form area, and a red arrow points from the instructions on the left towards the form.


# Leica GNSS RTK Setup

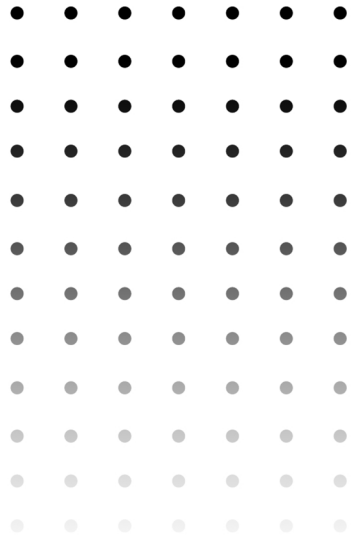

## 9 STEP NINE Specify Mountpoint

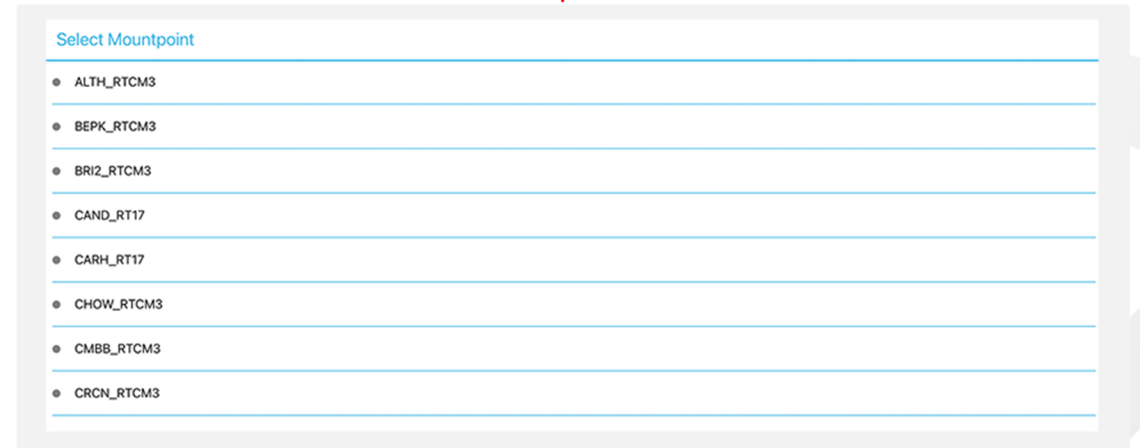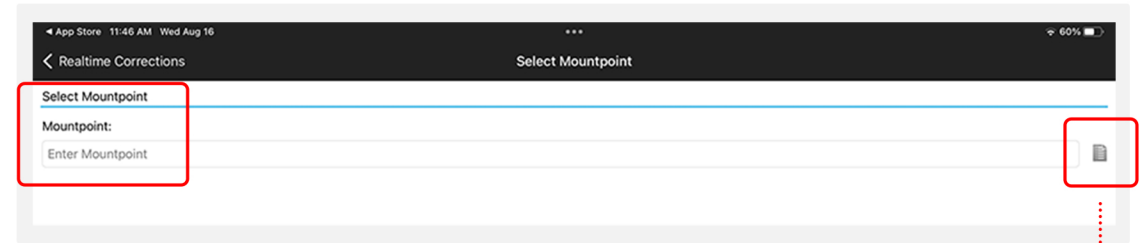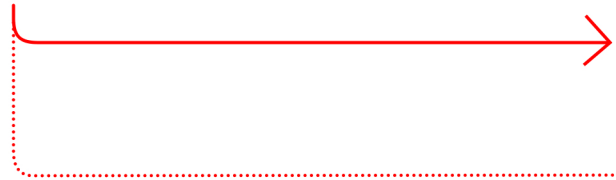

# Leica GNSS RTK Setup

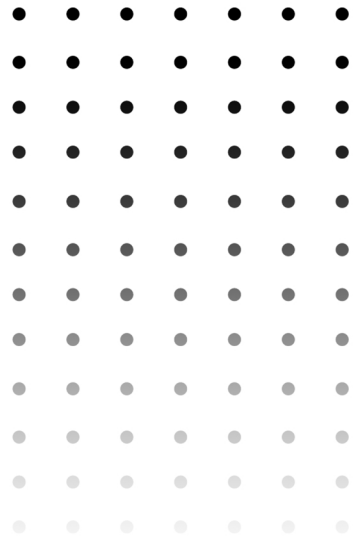


10

## STEP TEN


Save and Navigate back to the Zeno Connect Home Screen

You may need to close and re-open Zeno Connect for the configuration to apply

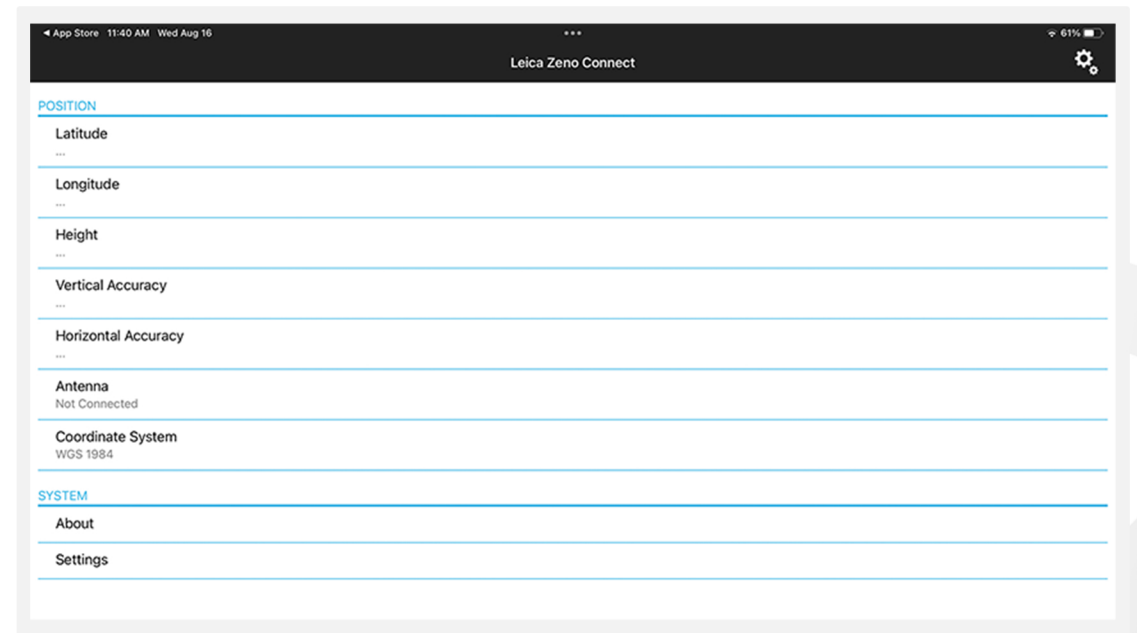



# Leica GNSS RTK Setup

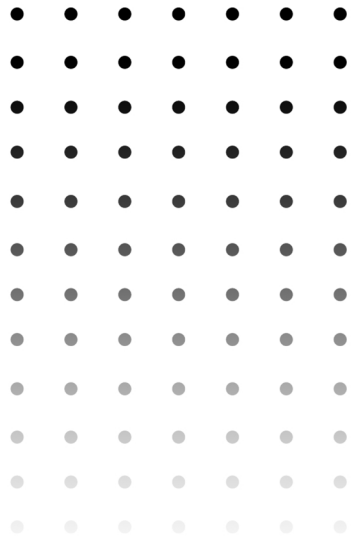

## CONFIGURATION COMPLETE

After following this guide, you should now be connected and ready to use your RTK device



vGIS Quick Start Guide  
RTK Configuration | 08.15.23

To read more Help Documentation about this process or get in touch with vGIS Support, visit <https://support.vgis.io>